



1. Machine should only be filled to half capacity. Wash at 20-40°C with ordinary detergent for approx. 5-15 min. at a time until the washing water is totally clean.
2. Rinsing in several changes of water that is gradually cooled off.
3. In the second-last change of rinsing water a disinfectant (chlorine), if needed, may be added. Do not add fabric softener as this may lead to shrinkage and odour nuisances.
4. Dripping - light spin-drying or hanging on a line while still moist. Dripping is recommended, but tumble drying at low temperature (max. 60°C outgoing air) can be effected, however, with risk of shrinkage.

**Note:** Only the visible part (bottom) is to be removed from the panel. Tools are not needed.